



Summit 30' Safety Line SU83098, SU83102

© 2016 Summit Treestands, LLC | 715 Summit Dr. Decatur,
AL 35601

PH#: (800) 353-0634 | www.summitstands.com



RATED WEIGHT LIMIT (MAX): 350 LBS

THIS ROPE IS DESIGNED FOR A SINGLE USER ONLY. NEVER USE THIS PRODUCT WITH TWO (2) PEOPLE CONNECTED TO THE 30 FT SAFETY LINE AT THE SAME TIME!!

NEVER EXCEED RATED WEIGHT LIMIT!(Includes user & all gear!!)

- READ, FOLLOW AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USE. INSPECT ALL EXPIRATION TAGS PRIOR TO EACH USE. IF YOU DON'T COMPLETELY UNDERSTAND SAFE AND PROPER USE OF THE **FULL BODY FALL ARREST HARNESS SYSTEM (FBFAHS)** OR TREESTAND, HUNT FROM THE GROUND! FAILURE TO FOLLOW ALL WARNINGS AND INSTRUCTIONS LISTED COULD RESULT IN SERIOUS INJURY OR DEATH! **IT IS REQUIRED THAT YOU WATCH AND UNDERSTAND THE DVD SUPPLIED WITH THIS PRODUCT & SAFETY WARNINGS AND INSTRUCTIONS AT: www.summitstands.com/safety-videos**
- THIS PRODUCT IS TO BE USED BY ONE (1) PERSON AT A TIME - WHILE ASCENDING OR DESCENDING. THIS PRODUCT WILL ENABLE ONE PERSON (AT A TIME) TO BE CONNECTED TO THE TREE WHILE ASCENDING OR DESCENDING THE TREE. THIS PRODUCT IS FOR SINGLE USE (AT A TIME) ONLY!!!
- ALWAYS INSPECT THE TREESTAND AND THE FBFAHS FOR ANY SIGN OF DAMAGE OR WEAR PRIOR TO EACH USE! IF ANY SIGN OF DAMAGE OR WEAR IS PRESENT OR A TAG HAS EXPIRED FROM THE DATE STATED, DISCONTINUE USE IMMEDIATELY AND HUNT FROM THE GROUND.
- ALWAYS WEAR A FBFAHS THAT MEETS INDUSTRY STANDARDS RECOGNIZED BY THE TMA. WEAR A FBFAHS EVERY TIME YOU LEAVE THE GROUND, INCLUDING ASCENDING OR DESCENDING. SINGLE BELT STRAPS AND CHEST HARNESES ARE NO LONGER ALLOWED AND SHALL NOT BE USED! FAILURE TO USE A FBFAHS COULD RESULT IN SERIOUS INJURY OR DEATH!
- THE LENGTH OF THE HARNESS TETHER SHALL BE MINIMIZED AT ALL TIMES. IT SHALL BE ADJUSTED SO THAT IT IS ABOVE THE HEAD WITH NO SLACK (OR SNUG) IN THE SEATED POSITION AND YOU SHALL HAVE MINIMUM AMOUNT OF SLACK POSSIBLE WHEN CLIMBING. FAILURE TO DO SO MAY RESULT IN SUSPENSION WITHOUT THE ABILITY TO RECOVER TO YOUR TREESTAND. BE AWARE OF HAZARDS ASSOCIATED WITH HANGING SUSPENDED IN A FBFAHS AND THE FACT THAT PROLONGED SUSPENSION IN A HARNESS MAY BE FATAL.
- ALWAYS NOTIFY SOMEONE OF YOUR HUNTING LOCATION IN CASE OF AN EMERGENCY. IF OTHERS ARE NOT AWARE OF YOUR HUNTING LOCATION AND COMMUNICATION EFFORTS ARE UNSUCCESSFUL, YOU MUST HAVE A PERSONAL PLAN FOR RECOVERY/ESCAPE BEFORE YOU ASCEND THE TREE - PROLONGED SUSPENSION IN A HARNESS CAN BE FATAL. IT IS IMPORTANT TO EXERCISE THE LEGS BY PUSHING AGAINST THE TREE OR DOING OTHER FORMS OF CONTINUOUS LEG EXERCISES TO AVOID BLOOD POOLING WHILE BEING SUSPENDED. HUNTERS WITH VARYING DEGREES OF PHYSICAL FITNESS MAY REQUIRE DIFFERENT PLANS TO RECOVER/ESCAPE TO AVOID EFFECTS OF PROLONGED SUSPENSION. HAVE A PERSONAL PLAN AND PRACTICE IT IN THE PRESENCE OF A RESPONSIBLE ADULT BEFORE LEAVING THE GROUND. NO ESCAPE/RECOVERY PLAN WILL WORK FOR EVERY HUNTER ON EVERY TREE IN EVERY CIRCUMSTANCE. ONLY YOU CAN DETERMINE THE BEST RECOVERY/ESCAPE PLAN FOR YOUR HUNTING SITUATION AND YOU MUST HAVE A RECOVERY/ESCAPE PLAN FOR YOUR SITUATION BEFORE LEAVING THE GROUND. HUNT FROM GROUND WHEN SELF-RECOVERY/ESCAPE ABILITY IS ABSENT.
- PRACTICE THE USE OF A FBFAHS AT GROUND LEVEL IN THE PRESENCE OF RESPONSIBLE ADULT TO UNDERSTAND PROPER USE AND EXPERIENCE THE FEELING OF HANGING SUSPENDED BEFORE USING IN A HUNTING ENVIRONMENT.
- IF THERE ARE ANY QUESTIONS OR CONCERNS WITH INSTRUCTION, WARNINGS, OR PROPER USE **"STOP"** AND CONTACT THE MANUFACTURER. DO NOT USE UNLESS YOU FULLY UNDERSTAND SAFE AND PROPER USE. MAINTAIN ALL WARNINGS, INSTRUCTIONS, AND DVD(S) FOR LATER REVIEW AS NEEDED, FOR INSTRUCTION USAGE TO ANYONE BORROWING YOUR STAND/FBFAHS OR TO PASS ON WHEN SELLING THESE ITEMS. USE ALL SAFETY DEVICES PROVIDED WITH YOUR TREESTAND AND FBFAHS.
- A SUSPENSION RELIEF DEVICE MUST BE WORN ON YOUR PERSON AND READILY ACCESSIBLE WHILE USING A HARNESS. THIS DEVICE WILL ALLOW THE USER TO RELIEVE THE LOAD ON THE LOWER EXTREMITIES IF SUSPENDED IN A HARNESS TO HELP MAINTAIN CIRCULATION IN THE LEGS AND HELP MITIGATE SUSPENSION TRAUMA (BLOOD POOLING) OR ALLOW DESCENT TO GROUND. BE SURE TO FOLLOW MANUFACTURER'S DIRECTIONS ON THE SAFE USE OF ANY SUSPENSION RELIEF DEVICE.
- SEVERAL OPTIONAL PRODUCTS/SYSTEMS ARE AVAILABLE THAT OFFER SELF-RECOVERY OR SELF EXTRACTION FROM A FALL WHEN SUSPENDED IN A HARNESS. SOME SYSTEMS AUTOMATICALLY DESCEND THE USER WHILE OTHERS ALLOW USER CONTROL. ONE OF THESE PRODUCTS/SYSTEMS COULD BE CONSIDERED FOR USE AS AN ADDITIONAL SAFETY PRECAUTION AGAINST PROLONGED SUSPENSION AND SUSPENSION TRAUMA. BE SURE TO FOLLOW MANUFACTURER'S DIRECTIONS ON THE SAFE USE OF THESE PRODUCTS/SYSTEMS.
- THERE IS TIME TO MAKE A CORRECT DECISION ON WHAT ACTION TO TAKE IF A FALL OCCURS WHILE WEARING A FBFAHS. IT IS IMPORTANT TO REMEMBER TO "DO NOT PANIC". REMAIN CALM AND IMPLEMENT YOUR PRACTICED RESCUE, RELIEF, AND RECOVERY PLAN.
- NEVER USE THE FBFAHS OR TREESTAND WHILE FEELING ILL, NAUSEOUS OR DIZZY, OR IF YOU HAVE PRIOR MEDICAL CONDITION THAT COULD CAUSE A PROBLEM, THAT IS, HEART CONDITION, JOINTS THAT LOCK-UP, SPINAL FUSIONS, ETC OR IF YOU ARE NOT WELL RESTED.
- DO NOT USE THE FBFAHS OR TREESTAND IF UNDER THE INFLUENCE OF ALCOHOL OR DRUGS (INCLUDES PRESCRIPTION MEDICATIONS). THIS INCLUDES OVER-COUNTER MEDICATIONS THAT MAY CLOUD OR ALTER JUDGMENT OR MENTAL STATE. CONSULT WITH YOUR PHYSICIAN BEFORE USING THIS PRODUCT TO ENSURE SAFE AND PROPER USE.
- NEVER USE TREESTAND OR FBFAHS DURING INCLEMENT WEATHER SUCH AS RAIN, LIGHTNING, WINDSTORMS, SNOW, HAIL, SLEET OR ICY CONDITIONS. END YOUR HUNT AND RETURN TO THE GROUND IF INCLEMENT CONDITIONS ARISE.
- NEVER USE ON A DEAD, LEANING, DISEASED OR LOOSE BARK TREE, OR UTILITY POLE.
- ALWAYS MAINTAIN THREE (3) POINTS OF CONTACT WHILE CLIMBING A LADDER STAND OR CLIMBING AIDE. NEVER BE DISCONNECTED FROM THE TREE WHEN TRANSFERRING FROM YOUR CLIMBING AIDE TO THE FIXED POSITION STAND. PRACTICE AT GROUND LEVEL BEFORE USING AT A ELEVATED POSITION.

1 WARNING LABELS

⚠ WARNING


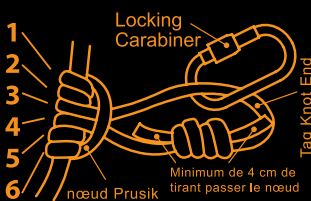
DO NOT REMOVE ANY WARNING LABELS FROM THE PRODUCT!

Call 800-353-0634 or visit www.summitstands.com if you have any questions or concerns. Failure to do so could result in serious injury or death!

SAFETY LINE

<p>⚠ WARNING FAILURE TO READ, UNDERSTAND AND FOLLOW ALL INCLUDED MANUFACTURER'S WRITTEN AND VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE COULD RESULT IN SERIOUS INJURY OR DEATH!!</p>	<p>• Warning! To prevent potential choking hazard, keep tether away from neck and prevent tether from looping under arms. • Read and follow ALL instructions and warnings prior to each use. • This rope is to be used as a Lineman's Rope and Tether Rope as directed in the written and video instructions and with specific Summit harnesses ONLY. Using for any other purpose could result in serious injury or death! DO NOT REMOVE THIS LABEL!</p>	<p>⚠ WARNING FAILURE TO READ, UNDERSTAND AND FOLLOW ALL INCLUDED MANUFACTURER'S WRITTEN AND VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE COULD RESULT IN SERIOUS INJURY OR DEATH!! Prolonged harness suspension can be fatal. If rescue personnel cannot be notified, you must use the rescue strap and ways to avoid suspension.</p>	<p>--- MANUFACTURED IN --- J F M A M J J A S O N D 2016</p> <p>⚠ WARNING! THIS PRODUCT MUST BE DISCARDED AFTER THREE (3) YEARS OF THE MANUFACTURE DATE SHOWN ABOVE, OR AFTER ARRESTING A FALL, WHICHEVER IS SOONER. FAILURE TO DISCARD THIS PRODUCT AS DIRECTED COULD RESULT IN SERIOUS INJURY OR DEATH. REPLACEMENT ROPES MAY BE PURCHASED AT WWW.SUMMITSTANDS.COM</p> <p>⚠ WARNING! This Rope is used with ALL Summit harness ONLY! Inspect this Rope and Prusik Hitch for fraying, rips, tears, cuts, corrosion, wear or any other type of damage prior to each use. If any of this damage or wear is present, discontinue use IMMEDIATELY and hunt from the ground!</p> <p>Summit Treestands, LLC 715 Summit Dr. - Decatur, AL 35601 PH# 800-353-0634 / www.summitstands.com</p> <p>© 2016 STLLC Made in CHINA</p>
<p>Part#: SU30361-A</p> <p>Used with Summit Model(s): SU30361 - Safety Rope</p>	<p>Weight Limit (MAX): 350 lbs.</p> <p>© 2016 STLLC</p>		

PRUSIK HITCH

	<p>⚠ WARNING FAILURE TO READ, UNDERSTAND AND FOLLOW ALL INCLUDED MANUFACTURER'S WRITTEN AND VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE COULD RESULT IN SERIOUS INJURY OR DEATH!!</p> <p>MAKE SURE the Prusik Hitch has six (6) loops and 1.5" tags!! After adjustment, pull on the tag knot end of the Prusik Hitch to verify it locks to the Safety Line rope. DO NOT USE your harness unless the Prusik Hitch looks like the diagram on the left. Read ALL warnings and Instructions prior to each use!! © 2016 STLLC Summit Treestands - PH# 800-353-0634 - www.summitstands.com</p>
	<p>⚠ AVERTISSEMENT NE PAS LIRE, COMPRENDRE ET SUIVRE TOUTES LES INSTRUCTIONS ÉCRITES ET PAR VIDEO DU MANUFACTURIER AINSI QUE LES AVERTISSEMENTS AVANT L'UTILISATION POURRAIT ENGENDRER DES BLESSURES SÉRIEUSES OU LA MORT!!</p> <p>Fabriqué en Chine</p> <p>ASSUREZ-VOUS que l'attelage Prusik a six (6) boucles et un excédent de quatre (4) cm!! Après l'avoir ajusté, tirez sur le nœud de l'excédent de l'attelage Prusik afin de vérifier si le verrouillage est fait avec le câble de sécurité.</p> <p>N'UTILISEZ PAS votre harnais à moins que l'attelage Prusik ressemble à celui du diagramme de gauche. Lisez TOUS les avertissements et les instructions avant chaque utilisation!!</p>

2 CONTENTS

SU83098

- (1) 30' SAFETY LINE WITH DUAL PRUSIK HITCHES
- (2) LOCKING CARABINERS
- * IT IS REQUIRED THAT YOU PURCHASE OR PROVIDE ADDITIONAL TETHER ROPES AND CARABINERS.

SU83102

- (3) 30' SAFETY LINES WITH DUAL PRUSIK HITCHES
- * IT IS REQUIRED THAT YOU PURCHASE OR PROVIDE ADDITIONAL TETHER ROPES AND CARABINERS.
- * LOCKING CARABINERS NOT INCLUDED

3 ROPE REPLACEMENT

REPLACE YOUR SAFETY ROPE EVERY THREE (3) YEARS (OR SOONER) OR:

- IF ANY PART OF THE SAFETY LINE HAS BEEN SUBJECTED TO ANY TYPE OF SHOCK LOADING OR AFTER ARRESTING A FALL.
- IF ANY PART OF THE SAFETY LINE HAS BEEN SUBJECTED TO ANY KIND OF OVERLOAD FOR WHICH IT WAS NOT DESIGNED. HUNT FROM THE GROUND UNTIL YOU FULLY UNDERSTAND SAFE AND PROPER USE OF THIS SAFETY LINE!!
- IF ANY SIGN OF FRAYING, RIPS, TEARS, CUTS, CORROSION WEAR OR ANY OTHER TYPE OF DAMAGE ON ANY PART OF THIS SAFETY LINE IS PRESENT.
- IF ANY MANUFACTURED DATE TAG IS EXPIRED.

⚠ WARNING

If a fall has occurred, you must replace the safety line immediately by contacting Summit Treestands, LLC.

This Safety Line has been designed to be used only as a safety device for hunting from elevated treestands. Any other use is **STRICTLY PROHIBITED!**

4 USE

ASCENDING TO THE TREESTAND

⚠ WARNING

THIS PRODUCT IS A CLIMBING AID TO BE USED BY ONE PERSON AT A TIME. THIS PRODUCT IS NOT DESIGNED TO HAVE TWO (2) PEOPLE CONNECTED TO BOTH PRUSIK HITCHES (ON THE 30 FT SAFETY LINE) AT THE SAME TIME NOR IS IT DESIGNED TO BE USED AS A SAFETY STRAP/ROPE WHILE AT DESIRED ELEVATED HUNTING HEIGHT OR WHILE AT THE FOOT PLATFORM ON THE TREESTAND! AT ELEVATION, ALWAYS CONNECT THE SAFETY STRAP / ROPE THAT CAME WITH YOUR FULL BODY FALL ARREST HARNESS SYSTEM AS EXPLAINED BEFORE. FAILURE TO FOLLOW ALL THE WARNINGS AND INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH!

1. Ensure both Prusik Hitches are at the bottom (ground level) of the 30 FT Safety Line. **See figure 1.** Secure the tether on your Full Body Fall Arrest Harness System (FBFAHS) to the Prusik Hitch by using a Locking Carabiner to the TOP Prusik Hitch. Ensure the Carabiner is closed and locked securely. **See figure 2.**
2. While ascending to the treestand, slide the Prusik Hitch up the rope while keeping the Prusik above eye level while your climb.

⚠ WARNING

NEVER be disconnected from the tree once you leave the ground until you return safely back to the ground!!

1



2



30 FT SAFETY LINE

3. Once you reach the foot platform, secure your FBFAHS Safety Strap/Rope around the tree and while staying connected to the 30 FT Safety Line, secure your FBFAHS tether to an additional Safety Rope Prusik Hitch using a second Locking Carabiner. **See figure 3.** At this point, your harness tether will be connected to the 30 FT Safety Line AND to the second added Safety Rope Prusik Hitches. **See figure 4.** Now, you can safely disengage the Carabiner connecting you to the 30 FT Safety Line. Following this method ensures you are connected at all times.

3



4

DOUBLE CONNECTION



⚠ WARNING

Upon reaching hunting height, each user must connect their harness to a separate safety strap / rope. In order to accomplish this, each person must have an additional Tether Rope and Carabiner to safely use this product. Additional Tether Rope and Carabiner not included with this product. Use with Summit Treestand Harnesses Only.

⚠ WARNING

NEVER USE THE 30 FT SAFETY LINE WITH TWO (2) PEOPLE CONNECTED TO THIS SYSTEM AT THE SAME TIME!! THIS PRODUCT IS TO BE USED BY A CLIMBER - ONE AT A TIME. THE SECOND USER SHOULD NOT BEGIN TO ASCEND OR DESCEND UNTIL THE FIRST USER HAS SECURELY ATTACHED THEIR HARNESS TO A SEPARATE SAFETY STRAP/ROPE, AND REMOVED THEIR TETHER FROM THE 30 FT SAFETY LINE. FAILURE TO FOLLOW THE ALL WARNINGS AND INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH!

- Once the First person is secured to a separate Safety Strap/Rope, the Second person (at ground level) can now safely attach their tether to the BOTTOM Prusik Hitch on the 30 FT Safety Line and safely ascend to the treestand keeping the Prusik Hitch above eye level while ascending the tree.
- Upon arrival of the Second person the foot platform, secure your Safety Rope around the tree and secure your FBF AHS tether to the second Safety Rope Prusik Hitch using a Locking Carabiner. At this point, your harness tether will be connected to the 30 FT Safety Line AND to the Safety Rope Prusik Hitches. *See figure 5.* Following this method ensures you are connected at all times. Now, you can safely disengage the Carabiner connecting you to the 30 FT Safety Line. *See figure 6.*
- At this point, BOTH people are secured to SEPARATE Safety Strap/Rope(s) as shown in *figure 6.*

5

DOUBLE CONNECTION



SECOND PERSON
DOUBLE CONNECTED TO
SEPARATE SAFETY ROPE
AND 30 FT SAFETY LINE

30 FT SAFETY LINE

FIRST PERSON
CONNECTED TO
SEPARATE SAFETY ROPE

6



SECOND PERSON
CONNECTED TO
SEPARATE SAFETY
ROPE

30 FT SAFETY LINE

FIRST PERSON
CONNECTED TO
SEPARATE SAFETY ROPE

⚠ WARNING

NEVER be connected to the SAME Safety Strap/Rope or the 30' Safety Line.

DESCENDING FROM THE TREESTAND

- Ensure both Prusik Hitches are at the TOP of the 30 FT Safety Line. The First person exiting the treestand: Secure the tether on your Full Body Fall Arrest Harness System to the BOTTOM Prusik Hitch on the 30 FT Safety Line while staying connected to the Safety Strap/Rope. *See figure 5.* At this point, you should be double connected. Next, disengage the Carabiner connecting you to the Safety Strap/Rope and remove the Safety Strap/Rope from the tree.
- Carefully descend down the tree, sliding the Prusik Hitch down the rope as you descend. Keep the Prusik above eye level to reduce the fall distance in the event of a fall.
- Once safely on the ground, disengage from the 30 FT Safety Line.
- After the First person has safely reached ground level and has disengaged from the 30 FT Safety Line, it is now safe for the Second person to secure their tether on the Full Body Fall Arrest Harness System to the remaining Prusik Hitch on the 30 FT Safety Line while staying connected to the Safety Strap/Rope. At this point, you should be double connected. Next, disengage the Carabiner connecting you to the Safety Strap/Rope and remove the Safety Strap/Rope from the tree
- Carefully descend down the tree sliding the Prusik hitch down the rope as you descend. Keep the Prusik above eye level to reduce the fall distance in the event of a fall.
- Once safely on the ground, disengage from the 30 FT Safety Line.
- Before using at an elevated position, practice at ground level until you understand safe and proper use before.

This product is to be used with Summit Treestand safety harnesses only.

5

HARNESS SUSPENSION

It is necessary and very important that someone knows your hunting location and time of return. It is also very important that you carry (on your person) emergency communication devices such as a cell phone, two-way radio, whistle, signal flare or preferably a PLD (Personal Locator Device - FCC approved July, '03). When triggered, a PLD will transmit an emergency signal to local rescue teams identifying your location via satellite GPS coordinates. PLD's may be purchased at Wilderness outfitters or on the internet.

Suspension trauma or blood pooling can occur when suspended motionless in a harness for periods of time. This can lead to unconsciousness and death. A suspension relief strap is furnished with your harness. Read your harness instructions to assure that you know how to use it.

WARNING

If you have to hang in the tree before help arrives, you need to exercise your legs by pushing off from the tree or by using the enclosed suspension relief strap. See the treestand harness instructions and the enclosed instructions for more information.

Self extraction may be necessary in the unfortunate situation that (A) no one knows your location, (B) your communication efforts are exhausted, (C) you are confident that you have the strength, dexterity and ability to perform self-extraction and (D) you decide this is your "absolute last resort". It is recommended to carry a device to assist with this self-extraction. Simple devices such as screw-in steps or a rope "Tree Descender" (available from Summit) will allow you to remove the weight from your harness. This may enable you to return to the treestand/ladder/climbing steps or slowly descend the tree.

Several optional products / systems are available that offer self-recovery or self extraction from a fall when suspended in a harness. Returning to the ground obviously also relieves suspension trauma and some systems automatically descend the user while others allow user control. If one of these products/systems is selected for use as an additional safety precaution against prolonged suspension, be sure to follow the manufacturers' directions for safe use. Always practice with your treestand and FBFAHS at ground level until you fully understand safe and proper use.





Summit 30' Safety Line SU83098, SU83102

© 2016 Summit Treestands, LLC | 715 Summit Dr. Decatur,
AL 35601

PH#: (800) 353-0634 | www.summitstands.com



POIDS MAXIMUM:

159 KGS

CE CÂBLE EST CONÇU POUR ÊTRE UTILISÉ PAR UNE SEULE PERSONNE SEULEMENT. N'UTILISEZ JAMAIS CE PRODUIT POUR DEUX (2) PERSONNES ATTACHÉES SIMULTANÉMENT À LA CORDE DE SÉCURITÉ DE 9,1 MÈTRES!!

N'EXCÉDEZ JAMAIS LA LIMITE DE POIDS MAXIMALE. CECI INCLUT L'UTILISATEUR AINSI QUE TOUT L'ÉQUIPEMENT TRANSPORTÉ SUR LE MIRADOR.

- LISEZ, SUIVEZ ET COMPRENEZ TOUS LES AVERTISSEMENTS ET TOUTES LES INSTRUCTIONS AVANT L'UTILISATION. VÉRIFIEZ TOUTES LES DATES D'EXPIRATIONS SUR LES ÉTIQUETTES AVANT CHAQUE UTILISATION. SI VOUS NE COMPRENEZ PAS ENTIÈREMENT L'UTILISATION SÉCURITAIRE ET CORRECTE DU HARNAIS DE CORPS COMPLET AVEC SYSTÈME D'ARRÊT DE CHUTE (HCCSAC) OU DU MIRADOR, CHASSEZ À PARTIR DU SOL! NE PAS SUIVRE TOUS LES AVERTISSEMENTS ET TOUTES LES INSTRUCTIONS INDICQUÉS PEUT ENTRAÎNER DE SÉRIEUSES BLESSURES OU LA MORT! IL EST REQUIS DE SURVEILLER ET COMPRENDRE LE DVD FOURNI AVEC CE PRODUIT AINSI QUE LES AVERTISSEMENTS DE SÉCURITÉ ET LES INSTRUCTIONS AU : www.summitstands.com/safety-videos
- VOUS DEVEZ TOUJOURS VÉRIFIER LE MIRADOR ET LE HCCSAC POUR TOUT DOMMAGE OU USURE AVANT CHAQUE UTILISATION! SI VOUS REMARQUEZ DES DOMMAGES OU DE L'USURE OU SI L'ÉTIQUETTE INDIQUE UNE DATE D'EXPIRATION EXPIRÉE, ARRÊTEZ L'UTILISATION IMMÉDIATEMENT ET CHASSEZ À PARTIR DU SOL.
- PORTEZ TOUJOURS UN HCCSAC QUI RÉPOND RIGOREUSEMENT AUX STANDARDS DE L'INDUSTRIE TELS QUE RECONNUS PAR LE TMA. PORTEZ UN HCCSAC À TOUTES LES FOIS QUE VOUS QUITTEZ LE SOL, EN MONTANT ET EN DESCENDANT. LES COURROIES À UNE BRETELLE ET LES HARNAIS POUR LE TORSE NE SONT PLUS PERMIS ET NE DEVRAIENT PAS ÊTRE UTILISÉS! NE PAS UTILISER UN HCCSAC PEUT ENTRAÎNER DE SÉRIEUSES BLESSURES OU LA MORT!
- LA LONGUEUR DE LA COURROIE D'ANCRAGE DU HARNAIS DEVRAIT ÊTRE RÉDUITE AU MINIMUM EN TOUT TEMPS. ELLE DEVRAIT ÊTRE AJUSTÉE POUR QU'ELLE SOIT AU DESSUS DE LA TÊTE SANS EXCÉDENT DANS LA POSITION ASSISE ET UN MINIMUM DE JEU DEVRAIT ÊTRE DISPONIBLE LORS DE L'ASCENSION. NE PAS SUIVRE CES INSTRUCTIONS POURRAIT ENGENDRER UNE SUSPENSION SANS POSSIBILITÉ DE RÉCUPÉRATION VERS LE MIRADOR. SOYEZ VIGILANT EN CE QUI A TRAIT AUX RISQUES RELIÉS À UNE SUSPENSION DANS UN HCCSAC ET AU FAIT QU'UNE SUSPENSION PROLONGÉE DANS UN HARNAIS PEUT ÊTRE MORTELLE.
- VEUILLEZ TOUJOURS INFORMER UNE TIÈRE PERSONNE DE VOTRE EMPLACEMENT DE CHASSE EN CAS D'URGENCE. SI PERSONNE N'EST AU COURANT DE VOTRE EMPLACEMENT DE CHASSE ET QUE LA COMMUNICATION EST INFRACTUEUSE, VOUS DEVEZ AVOIR UN PLAN PERSONNEL POUR RÉCUPÉRER OU VOUS LIBÉRER AVANT L'ASCENSION DANS L'ARBRE. UNE SUSPENSION PROLONGÉE DANS UN HARNAIS PEUT ÊTRE MORTELLE. IL EST IMPORTANT DE FAIRE DES EXERCICES AVEC LES JAMBES EN POUSSANT SUR L'ARBRE OU EN FAISANT D'AUTRES GENRES D'EXERCICES AVEC LES JAMBES POUR ÉVITER L'ACCUMULATION DE SANG LORS D'UNE SUSPENSION. LES CHASSEURS POSSÉDANT DES CONDITIONS PHYSIQUES DIFFÉRENTES AURONT BESOIN DE PLANS DIFFÉRENTS POUR RÉCUPÉRER OU SE LIBÉRER ET AINSI ÉVITER LES EFFETS D'UNE SUSPENSION PROLONGÉE. AYEZ UN PLAN PERSONNEL ET PRATIQUEZ-LE EN PRÉSENCE D'UN ADULTE RESPONSABLE AVANT DE QUITTER LE SOL. AUCUN PLAN DE RÉCUPÉRATION OU DE LIBÉRATION NE PEUT FONCTIONNER POUR TOUS LES CHASSEURS, POUR TOUT TYPE D'ARBRE ET DANS TOUTES LES CIRCONSTANCES. SEUL VOUS POUVEZ DÉTERMINER LE MEILLEUR PLAN POUR VOTRE SITUATION ET VOUS DEVEZ AVOIR CE PLAN AVANT DE QUITTER LE SOL. CHASSEZ À PARTIR DU SOL SI VOUS N'AVEZ PAS LA POSSIBILITÉ DE RÉCUPÉRER OU DE VOUS LIBÉRER D'UNE SUSPENSION.
- PRATIQUEZ L'UTILISATION D'UN HCCSAC AU NIVEAU DU SOL EN PRÉSENCE D'UN ADULTE RESPONSABLE POUR EN COMPRENDRE SON UTILISATION CORRECTE ET POUR EXPÉRIMENTER LA SENSATION D'ÊTRE SUSPENDU AVANT L'UTILISATION DANS UN ENVIRONNEMENT DE CHASSE.
- SI VOUS AVEZ DES QUESTIONS OU DES INQUIÉTUDES QUANT AUX INSTRUCTIONS, AVERTISSEMENTS OU L'UTILISATION CORRECTE "ARRÊTEZ" ET CONTACTEZ LE MANUFACTURIER. N'UTILISEZ PAS CE PRODUIT JUSQU'À CE QUE VOUS COMPRENIEZ ENTIÈREMENT SON UTILISATION SÉCURITAIRE ET CORRECTE. GARDEZ TOUS LES AVERTISSEMENTS, INSTRUCTIONS ET DVD POUR UNE UTILISATION ULTÉRIEURE SI NÉCESSAIRE, POUR TOUTE PERSONNE QUI EMPRUNTRERA VOTRE MIRADOR/HCCSAC OU POUR TRANSMETTRE À QUICONQUE ACHETERAIT CES PRODUITS. UTILISEZ TOUS LES DISPOSITIFS DE SÉCURITÉ FOURNIS AVEC LE MIRADOR ET LE HCCSAC.
- VOUS DEVEZ PORTER UN DISPOSITIF D'AIDE À LA SUSPENSION EN TOUT TEMPS LORS DE L'UTILISATION DU HARNAIS. CE DISPOSITIF PERMET À L'UTILISATEUR DE SOULAGER LE POIDS QUI PÈSE SUR LES MEMBRES INFÉRIEURS LORS D'UNE SUSPENSION DANS LE HARNAIS CE QUI AIDERA À LA CIRCULATION DU SANG DANS LES JAMBES ET ALLÉGERA LE TRAUMA DÙ À LA SUSPENSION (ACCUMULATION DE SANG) OU PERMETTRA LA DESCENTE VERS LE SOL. ASSUREZ-VOUS DE SUIVRE LES INSTRUCTIONS DU MANUFACTURIER QUANT À L'UTILISATION SÉCURITAIRE D'UN DISPOSITIF D'AIDE À LA SUSPENSION.
- PLUSIEURS PRODUITS/SYSTÈMES OPTIONNELS QUI SERVENT À L'AUTO-RÉCUPÉRATION OU À L'AUTO-EXTRACTION LORS D'UNE CHUTE LORSQUE SUSPENDU DANS UN HARNAIS SONT DISPONIBLES. DES SYSTÈMES DESCENDENT AUTOMATIQUEMENT L'UTILISATEUR TANDIS QUE D'AUTRES PERMETTENT LE CONTRÔLE PAR L'UTILISATEUR. UN DE CES PRODUITS/SYSTÈMES POURRAIT ÊTRE CONSIDÉRÉ À TITRE DE PRÉCAUTION ADDITIONNELLE POUR PRÉVENIR UNE SUSPENSION PROLONGÉE OU UN TRAUMATISME LIÉ À UNE SUSPENSION. ASSUREZ-VOUS DE SUIVRE LES INSTRUCTIONS DU MANUFACTURIER SUR L'UTILISATION SÉCURITAIRE DE CES PRODUITS/SYSTÈMES.
- SI UNE CHUTE SURVIENT LORSQUE VOUS PORTEZ LE HCCSAC, PRENEZ LE TEMPS DE PRENDRE LA BONNE DÉCISION EN CE QUI A TRAIT À L'ACTION REQUISE. IL EST IMPORTANT DE SE SOUVENIR DE "NE PAS PANIQUER". RESTEZ CALME ET METTEZ EN ŒUVRE VOTRE PLAN DE SAUVETAGE, DE SECOURS ET DE RÉCUPÉRATION TEL QUE PRATiqué.
- N'UTILISEZ JAMAIS LE HCCSAC OU LE MIRADOR SI VOUS ÊTES MALADE, SI VOUS AVEZ DES NAUSÉES OU SI VOUS ÊTES ÉTOURDI, OU SI VOUS AVEZ UNE CONDITION MÉDICALE QUI POURRAIT POSER PROBLÈME PAR EXEMPLE UNE MALADIE DU COEUR, DES ARTICULATIONS QUI BLOQUENT, DES VERTÈBRES QUI SE FUSIONNENT ETC OU SI VOUS ÊTES FATIGUÉ.
- N'UTILISEZ PAS LE HCCSAC OU LE MIRADOR SI VOUS ÊTES SOUS L'INFLUENCE DE L'ALCOOL OU DE DROGUES (INCLUANT UNE PRESCRIPTION). CECI INCLUT LES MÉDICAMENTS ACHETÉS AU COMPTOIR QUI POURRAIENT ALTÉRER VOTRE JUGEMENT, VOTRE ÉTAT MENTAL OU VOTRE BIEN-ÊTRE. CONSULTEZ VOTRE MÉDECIN AVANT L'UTILISATION DU PRODUIT POUR VOUS ASSURER DE L'UTILISATION SÉCURITAIRE ET CORRECTE.
- N'UTILISEZ JAMAIS UN MIRADOR OU UN HCCSAC PAR MAUVAIS TEMPS, PAR EXEMPLE S'IL PLEUT, S'IL Y A DES ÉCLAIRS, UNE TEMPÊTE DE VENT, DE LA NEIGE, DE LA GRÊLE, DE LA NEIGE FONDUE OU DES CONDITIONS GLACÉES. TERMINEZ VOTRE CHASSE ET DESCENDEZ AU SOL SI CES CONDITIONS SE PRÉSENTENT.
- N'UTILISEZ JAMAIS UN ARBRE MORT, UN ARBRE PENCHÉ OU MALADE OU UN ARBRE AVEC UNE ÉCORCE QUI SE DÉTACHE, OU UN POTEAU D'UTILITÉ PUBLIQUE.
- AYEZ TOUJOURS TROIS (3) POINTS DE CONTACT LORSQUE VOUS GRIMPEZ DANS UN MIRADOR À ÉCHELLE OU SI VOUS GRIMPEZ AVEC TOUT AIDE À LA MONTÉE. NE VOUS SÉPAREZ JAMAIS DE L'ARBRE LORSQUE VOUS PASSEZ À L'AIDE À LA MONTÉE JUSQU'AU MIRADOR FIXE. PRATIQUEZ-VOUS AU SOL AVANT L'UTILISATION AU NIVEAU ÉLEVÉ.

1 COMPOSANT AVERTISSEMENTS

AVERTISSEMENT
NE PAS RETIRER MIRADOR AVERTISSEMENTS OU
MIRADOR COMPOSANT AVERTISSEMENTS DE
PRODUITS!

Appellez le 800-353-0634 ou visitez le site web à l'adresse <http://www.summitstands.com/contactus/> si vous avez des questions.

SAFETY LINE

WARNING
 FAILURE TO READ, UNDERSTAND AND FOLLOW ALL INCLUDED MANUFACTURERS' WRITTEN AND VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE COULD RESULT IN SERIOUS INJURY OR DEATH!!

- Warning! To prevent potential choking hazard, keep tether away from neck and prevent tether from looping under arms.
- Read and follow ALL instructions and warnings prior to each use.
- This rope is to be used as a Lineman's Rope and Tether Rope as directed in the written and video instructions and with specific Summit harnesses ONLY. Using for any other purpose could result in serious injury or death! DO NOT REMOVE THIS LABEL!

Part#: SU30361-A

Used with Summit Model(s):
 SU30361 - Safety Rope

Weight Limit (MAX):
 350 lbs.

© 2016 STLLC

WARNING
 FAILURE TO READ, UNDERSTAND AND FOLLOW ALL INCLUDED MANUFACTURERS' WRITTEN AND VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE COULD RESULT IN SERIOUS INJURY OR DEATH!!
 Prolonged harness suspension can be fatal. If rescue personnel cannot be notified, you must remain suspended until you are rescued. See instructions for use of the suspension relief strap and ways to avoid suspension.

-- MANUFACTURED IN --
J F M A M J J A S O N D 2016

WARNING! THIS PRODUCT MUST BE DISCARDED AFTER THREE (3) YEARS OF THE MANUFACTURE DATE SHOWN ABOVE, OR AFTER ARRESTING A FALL, WHICHEVER IS SOONER. FAILURE TO DISCARD THIS PRODUCT AS DIRECTED COULD RESULT IN SERIOUS INJURY OR DEATH. REPLACEMENT ROPES MAY BE PURCHASED AT WWW.SUMMITSTANDS.COM

WARNING! This Rope is used with ALL Summit harness ONLY! Inspect this Rope and Prusik Hitch for fraying, rips, tears, cuts, corrosion, wear or any other type of damage prior to each use. If any of this damage or wear is present, discontinue use IMMEDIATELY and hunt from the ground!

Summit Treestands, LLC
 715 Summit Dr. - Decatur, AL 35601
 PH# 800-353-0634 / www.summitstands.com

© 2016 STLLC
 Made in CHINA

PRUSIK HITCH




WARNING
 FAILURE TO READ, UNDERSTAND AND FOLLOW ALL INCLUDED MANUFACTURER'S WRITTEN AND VIDEO INSTRUCTIONS AND WARNINGS PRIOR TO USE COULD RESULT IN SERIOUS INJURY OR DEATH!!

MAKE SURE the Prusik Hitch has six (6) loops and 1.5" tags!! After adjustment, pull on the tag knot end of the Prusik Hitch to verify it locks to the Safety Line rope. **DO NOT USE** your harness unless the Prusik Hitch looks like the diagram on the left. Read ALL warnings and Instructions prior to each use!!

© 2016 STLLC

Summit Treestands - PH# 800-353-0634 - www.summitstands.com

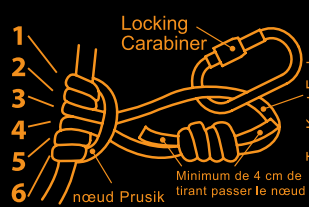

AVERTISSEMENT
 NE PAS LIRE, COMPRENDRE ET SUIVRE TOUTES LES INSTRUCTIONS ÉCRITES ET PAR VIDÉO DU MANUFACTURIER AINSI QUE LES AVERTISSEMENTS AVANT L'UTILISATION POURRAIT ENGENDRER DES BLESSURES SÉRIEUSES OU LA MORT!!

Fabriqué en Chine
ASSUREZ-VOUS que l'attelage Prusik a six (6) boucles et un excédent de quatre (4) cm!! Après l'avoir ajusté, tirez sur le nœud de l'excédent de l'attelage Prusik afin de vérifier si le verrouillage est fait avec le câble de sécurité.

N'UTILISEZ PAS votre harnais à moins que l'attelage Prusik ressemble à celui du diagramme de gauche. Lisez TOUS les avertissements et les instructions avant chaque utilisation!!

2 CONTENUS

SU83098

- (1) CORDE DE SÉCURITÉ DE 9,1 MÈTRES AVEC DES ATTELAGES PRUSIK DOUBLES
- (2) MOUSQUETON AVEC BARRURE

* IL EST REQUIS QUE VOUS ACHETIEZ OU FOURNISSEZ DES CÂBLES SANGLÉS AINSI QUE DES MOUSQUETONS ADDITIONNELS.

SU83102

- (3) CORDE DE SÉCURITÉ DE 9,1 MÈTRES AVEC DES ATTELAGES PRUSIK DOUBLES

* IL EST REQUIS QUE VOUS ACHETIEZ OU FOURNISSEZ DES CÂBLES SANGLÉS AINSI QUE DES MOUSQUETONS ADDITIONNELS.

* MOUSQUETONS AVEC BARRURE NON-INCLUS.

3 REMPLACEMENT DU HARNAIS

REPLACEZ VOTRE HARNAIS DE CORPS COMPLET AVEC SYSTÈME D'ARRÊT DE CHUTE (HCCSAC) À TOUTES LES CINQ (5) ANNÉES (OU AVANT) OU:

- SI UNE PARTIE DU HCCSAC A ÉTÉ HEURTÉ LORS DU CHARGEMENT OU APRÈS AVOIR ARRÊTÉ UNE CHUTE.
- SI UNE PARTIE DU HCCSAC A ÉTÉ SOUMIS À UNE SURCHARGE POUR LAQUELLE IL N'A PAS ÉTÉ CONÇU CHASSEZ À PARTIR DU SOL JUSQU'À CE QUE VOUS COMPRENIEZ L'UTILISATION SÉCURITAIRE ET CORRECTE DU HCCSAC!!
- SI VOUS DÉTECTEZ DE L'EFFILOCHAGE, DES DÉCHIRURES, DES FISSURES, DE LA CORROSION OU TOUT AUTRE TYPE DE DOMMAGE SUR TOUTE PARTIE DU HCCSAC.
- SI LA DATE D'EXPIRATION SUR L'ÉTIQUETTE EST EXPIRÉE.

AVERTISSEMENT

S'il y a eu chute, vous devez remplacer le harnais immédiatement en contactant Summit Treestands, LLC.

Ce HCCSAC a été conçu pour être utilisé à titre de dispositif de sécurité pour la chasse effectué à partir d'un mirador élevé. Tout autre utilisation est STRICTEMENT INTERDIT!

4 UTILISATION

MONTÉE DANS LE MIRADOR

⚠ AVERTISSEMENT

CE PRODUIT EST UNE AIDE À LA MONTÉE QUI DOIT ÊTRE UTILISÉ PAR UNE PERSONNE À LA FOIS. CE PRODUIT N'EST PAS CONÇU POUR QUE DEUX PERSONNES SOIENT ATTACHÉES SIMULTANÉMENT AUX ATTELAGES PRUSIK (SUR LA CORDE DE SÉCURITÉ DE 9,1 MÈTRES). DE PLUS, IL N'EST PAS CONÇU POUR ÊTRE UTILISÉ À TITRE DE COURROIE OU CÂBLE DE SÉCURITÉ LORSQUE LA HAUTEUR DE CHASSE EST ATTEINTE OU LORSQUE VOUS ÊTES SUR LA PLATEFORME POUR LES PIEDS DANS LE MIRADOR! À HAUTEUR DE CHASSE, ATTACHEZ TOUJOURS LA COURROIE OU LE CÂBLE DE SÉCURITÉ QUI EST FOURNI AVEC VOTRE HARNAIS DE CORPS COMPLET AVEC SYSTÈME D'ARRÊT DE CHUTE TEL QU'EXPLIQUÉ ANTÉRIEUREMENT. NE PAS SUIVRE TOUS LES AVERTISSEMENTS ET LES INSTRUCTIONS PEUT ENGENDRER DE SÉRIEUSES BLESSURES OU LA MORT!

1. Assurez-vous que les attelages Prusik sont au niveau inférieur (au niveau du sol) de la corde de sécurité de 9,1 mètres. Attachez la sangle de votre harnais de corps complet avec système d'arrêt de chute (HCCSAC) à l'attelage Prusik à l'attelage Prusik SUPÉRIEUR en utilisant un mousqueton avec barrure sur l'attelage Prusik SUPÉRIEUR. Assurez-vous que le mousqueton est fermé et barré de façon sécuritaire. *Voir la figure 2.*
2. Lors de la montée dans le mirador, faites glisser l'attelage Prusik en haut du câble tout en gardant le Prusik au-dessus de la hauteur des yeux.

⚠ AVERTISSEMENT

NE vous séparez JAMAIS de l'arbre à partir du moment où vous quittez le sol et ce jusqu'à votre retour sécuritaire au sol!!

1



2



CORDE DE SÉCURITÉ DE 9,1 MÈTRES

3. Lorsque vous aurez atteint la plateforme pour les pieds, attachez votre courroie ou câble de votre HCCSAC autour de l'arbre et tout en étant attaché à la corde de sécurité de 9,1 mètres, attachez la sangle de votre HCCSAC à la corde de sécurité supplémentaire avec un attelage Prusik en utilisant un deuxième mousqueton avec barrure. *Voir la figure 3.* À cet instant, la sangle de votre harnais sera attachée à la corde de sécurité de 9,1 mètres ET à la deuxième corde de sécurité avec attelage Prusik. *Voir la figure 4.* Maintenant, vous pouvez détacher de façon sécuritaire le mousqueton qui vous relie à la corde de sécurité de 9,1 mètres. Suivre cette méthode assure que vous soyez attaché en tout temps.

3



CÂBLE DE SÉCURITÉ AVEC HARNAIS

CORDE DE SÉCURITÉ DE 9,1 MÈTRES

4

DOUBLE CONNECTION



⚠ AVERTISSEMENT

Lorsque vous aurez atteint la hauteur de chasse, chaque utilisateur doit attacher son harnais à une courroie ou à un câble de sécurité distinct. Pour se faire, chaque personne doit avoir un câble sanglé additionnel et un mousqueton pour l'utilisation sécuritaire de ce produit. Le câble sanglé et le mousqueton additionnel ne sont pas fournis avec ce produit. À être utilisé exclusivement avec un harnais pour mirador Summit.



AVERTISSEMENT

N'UTILISEZ JAMAIS LA CORDE DE SÉCURITÉ DE 9,1 MÈTRES POUR DEUX (2) PERSONNES ATTACHÉES À LA FOIS À CE SYSTÈME!! CE PRODUIT DOIT ÊTRE UTILISÉ PAR UN GRIMPEUR - UN À LA FOIS. LE SECOND UTILISATEUR NE DOIT PAS COMMENCER SON ASCENSION OU SA DESCENTE AVANT QUE LE PREMIER UTILISATEUR AIT ATTACHÉ SON HARNAIS DE FAÇON SÉCURITAIRE À UNE COURROIE OU UN CÂBLE DE SÉCURITÉ DISTINCT ET QU'IL AIT ENLEVÉ SA SANGLE DE LA CORDE DE SÉCURITÉ DE 9,1 MÈTRES. NE PAS SUIVRE TOUS LES AVERTISSEMENTS ET TOUTES LES INSTRUCTIONS PEUT ENGENDRER DE SÉRIEUSES BLESSURES OU LA MORT!

4. Lorsque la première personne sera attachée à une courroie ou à un câble de sécurité distinct, la deuxième personne (qui est au sol) peut, à cet instant, attachée de façon sécuritaire sa sangle à l'attelage Prusik INFÉRIEUR se trouvant sur la corde de sécurité de 9,1 mètres et monter de façon sécuritaire dans le mirador tout en gardant l'attelage Prusik au-dessus de la hauteur des yeux lors de l'ascension dans l'arbre.
5. Lorsque la deuxième personne sera arrivée sur la plateforme pour les pieds, attachez votre câble de sécurité autour de l'arbre et attachez la sangle de votre HCCSAC à la corde de sécurité supplémentaire avec un attelage Prusik en utilisant un mousqueton avec barrure. À cet instant, la sangle de votre harnais sera attachée à la corde de sécurité de 9,1 mètres ET au câble de sécurité avec un attelage Prusik. **Voir la figure 5.** Suivre cette méthode assure que vous soyez attaché en tout temps. Maintenant, vous pouvez détacher de façon sécuritaire le mousqueton qui vous relie à la corde de sécurité de 9,1 mètres. **Voir la figure 6.**
6. À cet instant, les DEUX personnes sont attachées à des courroies ou câbles de sécurité distinct tel qu'illustré à la **figure 6.**

5

DOUBLE CONNECTION



LA DEUXIÈME PERSONNE ATTACHÉE DEUX FOIS AU CÂBLE DE SÉCURITÉ DISTINCT ET À LA CORDE DE SÉCURITÉ DE 9,1 MÈTRES.

LA PREMIÈRE PERSONNE ATTACHÉE AU CÂBLE DE SÉCURITÉ DISTINCT.

CORDE DE SÉCURITÉ DE 9,1 MÈTRES

6



LA DEUXIÈME PERSONNE ATTACHÉE AU CÂBLE DE SÉCURITÉ DISTINCT.

LA PREMIÈRE PERSONNE ATTACHÉE AU CÂBLE DE SÉCURITÉ DISTINCT.

CORDE DE SÉCURITÉ DE 9,1 MÈTRES



AVERTISSEMENT

Ne soyez JAMAIS attaché à la MÊME courroie/câble ou à la corde de sécurité de 9,1 mètres.

DESCENDRE DU MIRADOR

1. Assurez-vous que les deux attelages Prusik sont AU-DESSUS de la ligne de sécurité de 9,1 mètres. La première personne qui quitte le mirador: Attachez la sangle sur votre harnais complet avec système d'arrêt de chute à l'attelage Prusik INFÉRIEUR sur la corde de sécurité de 9,1 mètres tout en demeurant attaché à la courroie ou au câble de sécurité. **Voir la figure 5.** À cet instant, vous devriez être attaché deux fois. Puis, détachez le mousqueton qui vous relie à la courroie ou au câble de sécurité et enlevez la courroie ou le câble de sécurité de l'arbre.
2. Descendez prudemment de l'arbre, tout en glissant l'attelage Prusik sur le câble lors de la descente. Assurez-vous que le Prusik soit au niveau de vos yeux afin de réduire la distance lors d'une chute.
3. Lorsque vous serez en sécurité au sol, détachez la corde de sécurité de 9,1 mètres.
4. Lorsque la première personne sera en sécurité au sol et se sera détachée de la corde de sécurité de 9,1 mètres, il sera alors sécuritaire pour la deuxième personne d'attacher son ancrage sur le harnais complet avec système d'arrêt de chute à l'attelage Prusik restant sur la corde de sécurité de 9,1 mètres tout en demeurant attachée à la courroie ou au câble de sécurité. À cet instant, vous devriez être attaché deux fois. Puis, détachez le mousqueton qui vous relie à la courroie ou au câble de sécurité et enlevez la courroie ou le câble de sécurité de l'arbre.
5. Descendez prudemment de l'arbre, tout en glissant l'attelage Prusik sur le câble lors de la descente. Assurez-vous que le Prusik soit au niveau de vos yeux afin de réduire la distance lors d'une chute.
6. Lorsque vous serez en sécurité au sol, détachez la corde de sécurité de 9,1 mètres.
7. Avant d'utiliser ce produit dans une position élevée, pratiquez au niveau du sol jusqu'à ce que vous compreniez son utilisation sécuritaire et correcte.

Ce produit doit être utilisé exclusivement avec des harnais pour mirador Summit.

5

SUSPENSION DU HARNAIS

Il est nécessaire et très important qu'une autre personne connaisse votre lieu de chasse et l'heure de votre retour. Il est également très important que vous ayez (en votre possession) un dispositif de communication d'urgence tel un téléphone cellulaire, une radio bidirectionnelle, un sifflet, une fusée de signalisation ou préférablement un DLP (Dispositif de localisation personnel - approuvé par le FCC - juillet 2003). Lorsqu'enclenché, ce DLP transmettra un signal d'urgence à l'équipe de secours locale et précisera votre position via des coordonnées GPS satellite. Un dispositif DLP peut être acheté dans un magasin de plein air ou sur internet.

Un traumatisme dû à la suspension ou à une interruption de la circulation sanguine peut survenir lorsque suspendu sans mouvement dans un harnais pour un période de temps. Une courroie de suspension de secours est fournie avec votre harnais. Lisez les instructions pour votre harnais pour vous assurer de l'utiliser adéquatement.

AVERTISSEMENT

Si vous devez vous suspendre à l'arbre en attendant des secours, vous devez exercer vos jambes en poussant sur l'arbre ou en utilisant la courroie de suspension de secours incluses. Voir les instructions du harnais du mirador et les instructions incluses pour plus d'information.

Une auto-extraction sera peut-être nécessaire advenant une des situations malheureuses suivantes A) Personne ne connaît votre localisation, B) Vous avez épuisé tous vos moyens de communication, C) Vous avez confiance en votre capacité physique, votre dextérité et votre habileté pour vous libérer et D) vous décidez que ceci est votre dernier recours. Il est nécessaire d'avoir en votre possession un dispositif pour aider à l'auto-extraction. Des dispositifs simples tels des marches vissées ou une corde "Tree Descender" (disponible chez Summit) vous permettra d'éliminer le poids sur votre harnais. Ceci vous pourrait vous permettre de revenir au mirador, à l'échelle ou aux marches vissées ou vous permettra de descendre lentement vers le sol.

Plusieurs produits/systèmes optionnels sont disponibles et permettent une auto-récupération ou auto-extraction suite à une chute lorsque suspendu dans un harnais. Le retour au sol, de toute évidence, enlève le traumatisme de suspension et d'autres systèmes descendent l'utilisateur automatiquement tandis que d'autres donnent le contrôle à l'utilisateur. Si un de ces produits/systèmes est choisi pour utilisation à titre de système de précaution additionnel de sécurité contre une suspension prolongée, assurez-vous de suivre les directions du fabricant pour l'utilisation sécuritaire.

